

# mamava® Privacy Panel Installation

service@mamava.com

(802) 347-2111

## TOOLS

- Step Ladder

## PARTS

- 2 Side Privacy Panels (11810)
- 1 Center Privacy Panel (11805)
- 1 Trimmed Center Privacy Panel (22755)
- 16 Plastic Clips (22830)

**1.** Enter 2014# on the keypad lock to open the pod.

**2.** Set up the step ladder in the center of the pod floor.

**3.** Remove the center and side roof panels by lifting straight up.




**4.** Place side roof panels on a clean, flat, and level surface such as carpeted floor or table. Ensure the heads of the rivets face down.

**5.** Set (1) side privacy panel (11810) over the top of the roof panel, centering it from side to side and end to end.

**6.** Slip (4) plastic clips onto the long ends of the privacy panel, approximately 6" from the end.

**7.** Center the privacy panel on the roof panel with the rivet heads facing down and the tail of the rivet facing up.

**8.** With the plastic clip inserted on the privacy panel, remove the adhesive backing from the plastic clips and stick them to the roof panel. Repeat for all (4) clips.

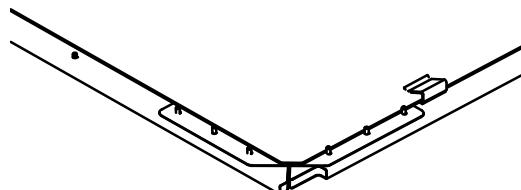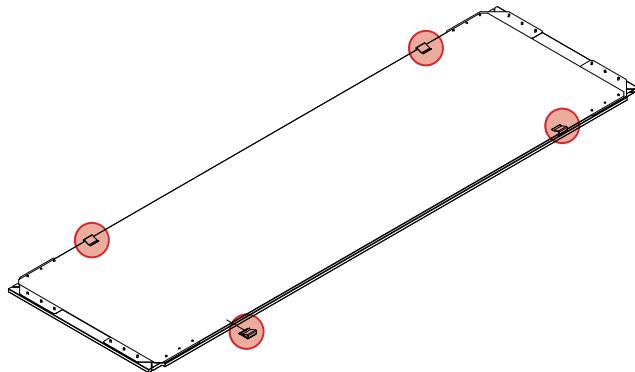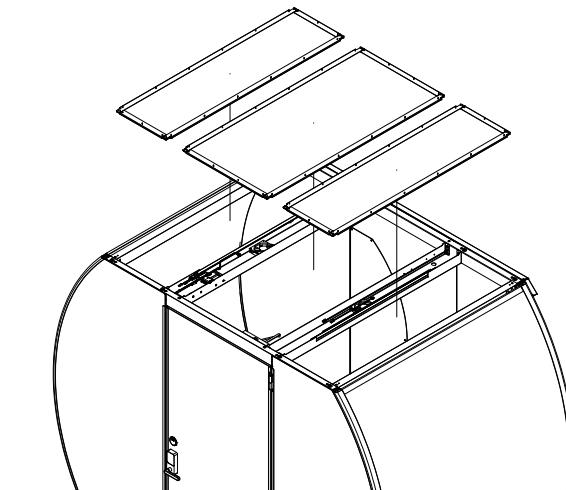

**9.** Repeat steps 5-9 for the second side roof panel.

**10.** Place the center roof panel on a clean, flat, and level surface such as carpeted floor or table. Ensure the heads of the rivets face down.

**11.** Set (1) center privacy panel (11805) over the top of the roof panel, centering it from side to side aligning the end of the privacy panel about 2" from the end of the roof panel.

**12.** Set the second center privacy panel (22755) over the top of the roof panel, centering it from side to side, and aligning the two ends of the privacy panels so the seam is tight. Note: The orientation of the holes in the privacy panels does not matter.

**13.** Slip (4) plastic clips onto the long ends of each privacy panel, approximately 6" from each end.

**14.** Make sure that the privacy panels are centered on the roof panel and the seam between the panels is tight. Check that the rivet heads are facing down, and the tail of the rivet is facing up.

**15.** With the plastic clip inserted on the privacy panel, remove the adhesive backing from the plastic clips, and stick them to the roof panel. Repeat until all (4) clips are adhered. Repeat for the second panel.

**16.** Place the perforated roof panels, rivet heads face down, between the roof trays. The wide panel goes in the center and the narrow panels go on the sides.

